












 
 




Universal Ceiling Mount

| Item / Type# | Image (x Quantity) | Usage |
|------------------------|---|---|
| 1. screw Type A |  X4 - 50mm length / 8mm diameter | Attach ceiling rod to ceiling mount base and the ceiling bracket to ceiling rod |
| 2. screw Type B |  X18 - 25mm length / 4mm diameter - 25mm length / 3mm diameter - 25mm length / 2.6mm diameter - 20mm length / 4mm diameter - 20mm length / 3mm diameter - 20mm length / 2.6mm diameter | Attach projector to ceiling mount bracket-use appropriate size for your equipment |
| 3. screw Type C |  X3 - 12mm length / 6mm diameter | Attach sliding extension to bracket |
| 4. tightening screw |  X4 | For use with allen key |
| 5. small washer |  X3 | |
| 6. large washer |  X3 | |
| 7. small fat cap |  X3 | |
| 8. large cylinder cap |  X4 | |
| 9. heat buffer piece |  X3 | Allows for proper heat distribution |
| 10. sliding extension |  X3 | Adds support and range to larger projector size |
| 11. projector bracket |  X1 | Supports projector and allows for adjustments |
| 12. ceiling mount base |  X1 | Attached to ceiling |
| 13. long rod |  X1 | Basic length unit |
| 14. medium rod |  X1 | Basic length unit |
| 15. short rod |  X1 | Basic length unit |
| 16. extension rod |  X1 | Increases basic length |
| 17. allen key |  X1 | Make tightening adjustments |

Note: Acer recommends that you consult an electrician or carpenter if you are not comfortable with the installation process.

acer

acer

